

Alcoscan AL7000 is a handheld, portable breath alcohol tester to check subject's breath alcohol concentration with reliable accuracy.

► **No calibration required! Easy-Replace Sensor Panel and module**



What is a "Pre-Calibrated Replaceable Sensor Module"?

Sentech Korea is the first breathalyzer company to introduce pre-calibrated replaceable modules (patent-pending) to the market. One of the main problems with using breathalyzers in critical applications is that the alcohol sensor, no matter what type, requires periodic re-calibration. Unfortunately, the re-calibration process requires that the breathalyzer be physically mailed or taken to a professional service center, at which point the device must be evaluated and proper steps must be taken for calibration with an expensive simulator system. The process is costly for both consumer and service center, and the delay of processing and shipping back-and-forth can be quite a loss. The Pre-Calibrated Replaceable Alcohol Sensor Module can eliminate the delays and complications of re-calibration by allowing you to simply "snap out" an old module and "snap in" a new module. This way, you can get back to reliable, accurate testing in a matter of seconds!

Specifications

1. Indication of B.A.C.: 0.00 to 4.00 ‰ or 0.000 to 0.400%BAC or 0.00 to 2.00 mg/l by LCD display
2. Sensor: Semiconductor type alcohol sensor
3. Accuracy: $\pm 0.01\%$ BAC at 0.05%BAC
4. Mouthpiece: use
5. Power: Two 1.5V "AA" size alkaline batteries and 12V cigar jack in car/ Auto Power off
6. Weights: 103g (Including Batteries)
7. Dimension(mm): 116 (height) X 50 (width) X 21 (thickness)
8. Audible warnings: 3 steps beep warning of alcohol detection
9. Available color: Silver
10. Certificate: CE, DOT, FDA 510K


Contents

1x Breathalyzer / 2x AA size Alkaline Batteries / 5x Mouthpiece / 1x Pouch / 1x Hand strap / 1x Manual


Package

50pcs/Carton *Size: 550 x 510 x 270(mm) / Weight: 18kg

Remark

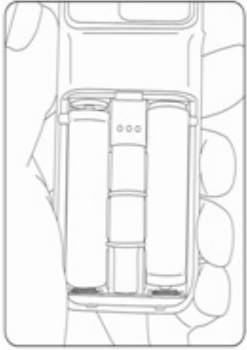

Mouthpiece Holder
It can keep 1pc
mouthpieces inside of
breathalyzer.

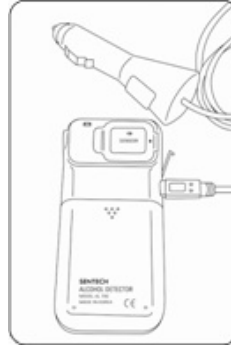

12V Alternative power
You can use alternative
power from car cigar jack
lighter with provided cable.

Please contact

21-6, Jimokro 75-gil, Paju-Si, Gyeonggi-Do, 10880 Korea

TEL: 82-31-8071-4400

FAX: 82-31-8071-4411

URL: www.sentechkorea.com

E-mail: sentech@sentechkorea.com