


The **Fuel Cell Sensor Technology**, ALC-1 is installed the fuel cell sensor module which can be both replaced and calibrated. It provides accurate test result and easy maintenance. A Compact design, easy handle and hidden personal mouthpiece. ALC-1 is real professional portable breathalyzer with convenience for user.

COMPONENTS

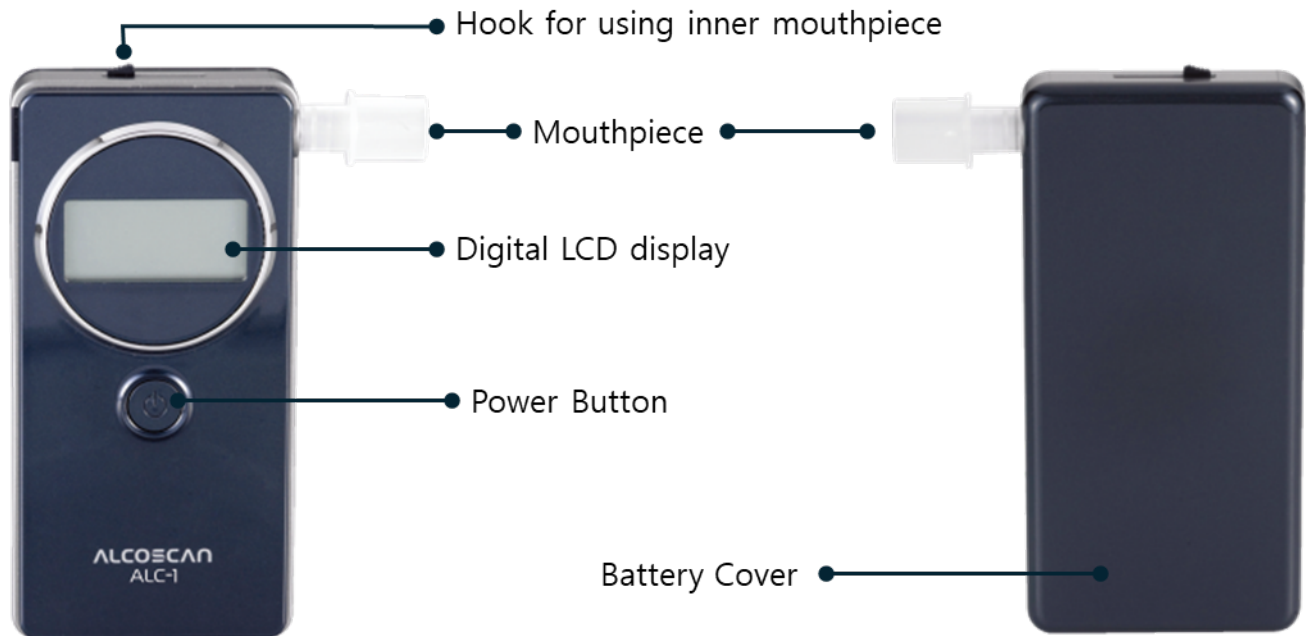

SPECIFICATIONS

Indication of B.A.C (Full 3 decimals)	0.000 to 4.000 ‰ or 0.000 to 2.000 mg/l or 0.000 to 0.400 %BAC by LCD Display
Warm up time	5 seconds ~ 2 minutes
Response time	within 10 seconds at 0.10 %BAC
Use mouthpiece	Provided Sentech Korea Corp. only
Sensor	Fuel Cell Sensor
Power supply	Two 1.5V "AAA"size alkaline batteries
weight	85g (Including Batteries)
dimensions(mm)	105(height) X 50(width) X 15(thickness)
Ambient conditions	Operation: 5 to 40 °C Storage : 0 to 50 °C
Accuracy	±0.005 %BAC at 0.050 %BAC
Sensor module	Sensor modules should be replaced approx. 1000 tests, or if damaged by improper testing or handling





CONTENTS

- 1x Breathalyzer
- 1x Hard case
- 5x Mouthpiece
- 2x AAA size Alkaline Batteries
- 1x Manual
- 1x Pouch

PACKAGE

- 60pcs/Carton
- Size: 567 x 445 x 357(mm)
- Weight: 20.5kg

***Replaceable Fuel cell Sensor Module**

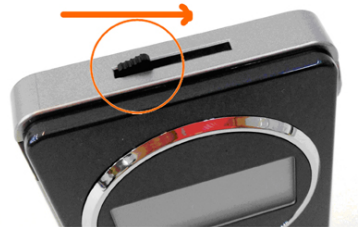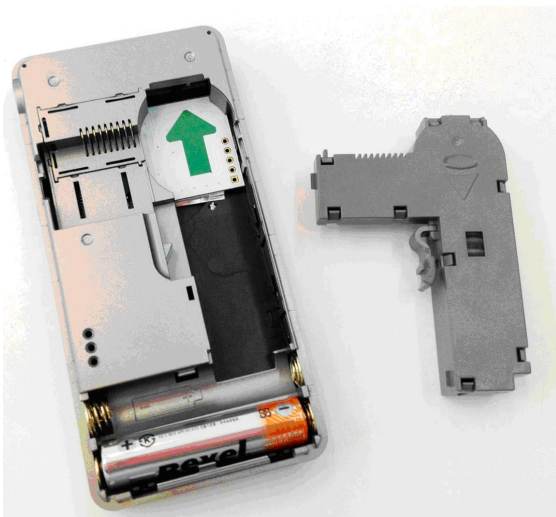

***Personal Mouthpiece**



Please contact

21-6, Jimokro 75-gil, Paju-Si, Gyeonggi-Do, 10880 Korea

TEL: 82-31-8071-4400 / FAX: 82-31-8071-4411

e-mail: sentech@sentechkorea.com

URL: www.sentechkorea.com