

Consumer Breathalyzer

AT808 Fuel Cell Alcohol Tester



AT808 High level personal alcohol tester, it adopts platinum fuel cell as core sensor to develop the functions of more accuracy and high sensitivity. AT808 featured with the testing records and app application. This machine can view maximum 99 stored records; and with Bluetooth function, its App could store millions testing records (depends on phone's memory) and transfer it by email, which meet the records' long-time storage. Compact structure and nice display build our elegant AT808 alcohol tester

FEATURE




- APP (AlcoCHECK) application
- Fuel cell sensor-accuracy and reliance
- Three color lights indication (Green, Blue and Red)
- Anti-backflow mouthpiece for health and safety
- Switchable result units (mg/l, g/l, %BAC, ‰BAC)
- Testing records review (machine-99, app-unlimited)
- Adjustable alarming point
- 2*AAA power
- Testing records review (machine-99, app-unlimited)

APPLICATION AND AFTER-SALES SERVICE

Consumer using, workshop, office, car, hotel, mine, etc.

One year guarantee

APP OPERATION

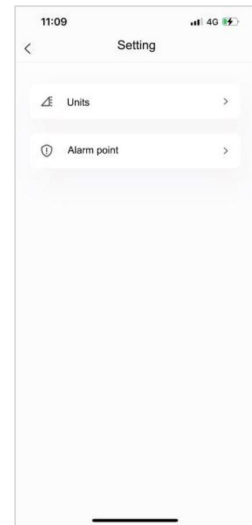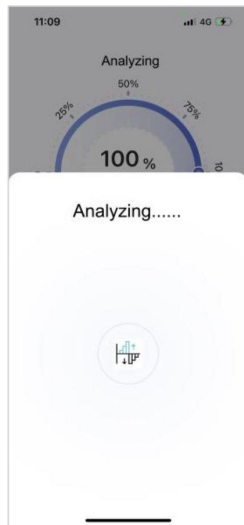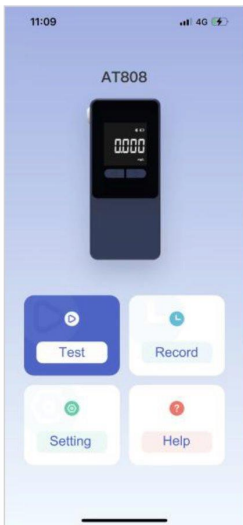

SPECIFICATIONS

Model	AT808	Testing Time	< 5 Sec
Sensor Type	Platinum fuel cell	Display	LCD
Detection Range	0.00 - 0.40%BAC, 0.00-4.00‰BAC 0.00 - 2.00mg/L; 0.00 - 4.00g/L	Power	2*AAA battery
		Working Environment	0°C - 50°C, ≤95% RH, No dews
Accuracy	± 0.005@ 0.05%BAC	Dimensions	105*45*16mm@58g
Alarm point	0.05%BAC; 0.50‰BAC; 0.25mg/L; 0.50g/L; (adjustable) < 5 Sec	Records	99 (device); unlimited (app)
		App Name	AlcoCHECK